


RICOH

Ricoh Image Scanner

IS430

User's Manual

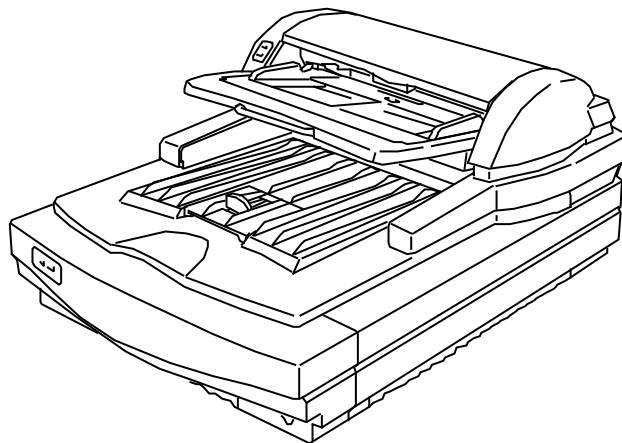

RICOH

Note to users in the United States of America

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning

Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

Note to users in Canada


This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus as set out in the interference-causing equipment standard entitled "Digital Apparatus", ICES-003 of the Department of Communications.

Remarque concernant les utilisateurs au Canada

Cet appareil numérique respecte les limites de bruits radioélectriques applicables aux appareils numériques de Classe B prescrites dans la norme sur le matériel brouilleur : "Appareils Numériques", NMB-003 édictée par le ministre des Communications.

Important information

This product can not be used in Europe because it does not comply with the CE (Conformité Européenne).

In accordance with IEC 417, this machine uses the following symbol for the main switch:  means Push ON Push OFF

Precautions

1. Read all of these instructions and keep them for later reference.
2. Follow all warnings and instructions marked on the device.
3. Unplug this device from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners.
4. Do not use this device near water.
5. Do not place this device on an unstable cart, stand, or table. The device could fall and suffer serious damage.
6. Slots and openings in the cabinet and the back or bottom are provided for ventilation; to ensure reliable operation of the device and protect it from overheating, these openings must not be blocked or covered. The openings should never be blocked by placing the device on a bed, sofa, rug, or other similar surface. This device should never be placed near or over a radiator or heat register. This device should not be placed in a built-in installation unless proper ventilation is provided.
7. This device should be operated from the type of power source indicated on the marking label. If you are not sure of type of power available, contact your dealer or local power company.
8. This product is equipped with a 3-wire grounding-type plug, a plug having a third (grounding) pin. This plug will only fit into a grounding-type outlet. This is a safety feature. If you are unable to insert the plug into the outlet, contact your electrician to replace your outlet. Do not defeat the purpose of the grounding-type plug by removing its grounding pin. (This does not apply in countries in which a 2-wire, non-grounded type of plug is used.)
9. Do not place this device where the cord will be walked on.
10. If an extension cord is used with this product, make sure that the total of the ampere ratings on the devices plugged into the extension cord does not exceed the extension cord ampere rating. Also, make sure that the total of all devices plugged into the wall outlet does not exceed 15 amperes.
11. Never push objects of any kind into this device through cabinet slots as they may touch dangerous voltage points or short out parts that could result in a risk of fire or electric shock. Never spill liquid of any kind on the product.
12. Except as specifically explained in the user's manual, do not attempt to service this device yourself. Opening or removing those covers that are marked "Do Not Remove" may expose you to dangerous voltage points or to other risks. Refer all servicing in those compartments to service personnel.
13. Unplug this device from the wall outlet and refer servicing to qualified service personnel under the following conditions;
 - A. When the power cord or plug is damaged or frayed.

- B. If liquid has been spilled into the product.
 - C. If the device has been exposed to rain or water.
 - D. If the device does not operate normally when the operating instructions are followed. Adjust only those controls that are covered by the operating instructions since improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to normal operation.
 - E. If the device has been dropped or the cabinet has been damaged.
 - F. If the device exhibits a distinct change in performance, indicating a need for service.
14. Make sure that the wall outlet is near the scanner and easily accessible.
 15. The main plug on this equipment must be used to disconnect main power.
 16. Use the standard cable attached to this scanner. Otherwise, use cables that meet the following requirements.

Area	Rating	Plug	Cable	Connector
North America	120V 15A	NEMA 5-15P	SVT or SJT 18/3 AWG Less than 1.6 m long	IEC320 type
Europe	230V (220-240V) 10A	Use the required equivalent for each country	H05VV-F or H05VVH2-F	EN60320 type

Contents

1. Part names	2
Front view	2
Rear view	3
2. Installation	4
Checking the parts	4
Location	5
Connecting the SCSI cable	6
Setting the SCSI ID	7
Connecting the power cord	7
Turning the power on	8
Initializing the scanner	8
3. Indicators	9
4. Placing originals	10
Placing an original on the contact glass	11
Placing originals on the document table	12
5. Cleaning	14
6. Troubleshooting	16
Lamp cover open	16
Lamp error	17
Document feeder cover open	17
Paper jam	18
Paper misfeed	19
Document table error	19
System error	20
Others	20
7. Specifications	21

Appendix	22
Functions	22
Prescan	23
Scan	23
Scanning composition	24
Binary scanning / Threshold	25
Halftone scanning	26
Multi-value scanning	27
Area extraction	28
Section area (Multi area settings)	29
Auto photo/letter	30
Resolution	31
Brightness	32
Contrast	32
Gamma correction	33
Binary filter	34
Parameter download	35
Document size detection	35
Skew detection	35
Semi-automatic document feed (SADF) mode	35
Options	36
Red lamp unit	36
Data compression unit	37
Video interface unit	37
Image processing unit	37


User's Manual (English)

Appendix	Specifications	Trouble-shooting	Cleaning	Placing originals	Indicators	Installation	Part names
----------	----------------	------------------	----------	-------------------	------------	--------------	------------


1. Part names

Front view



Closing the document feeder

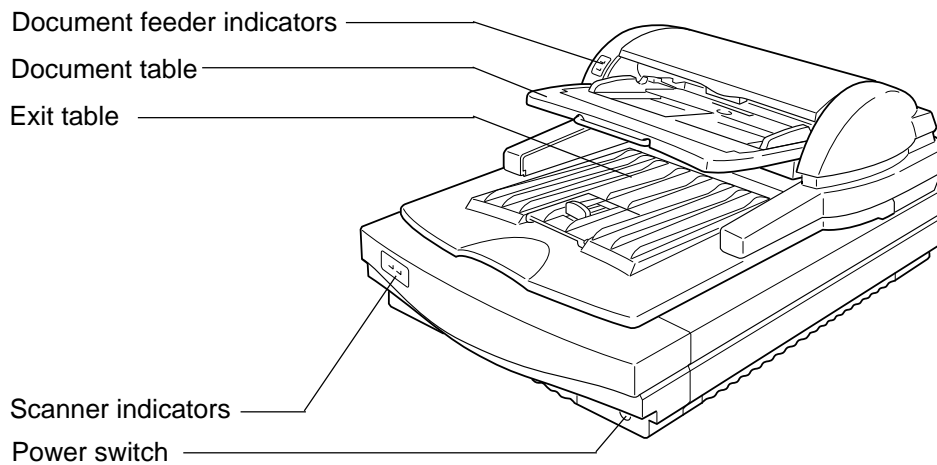

Opening the document feeder

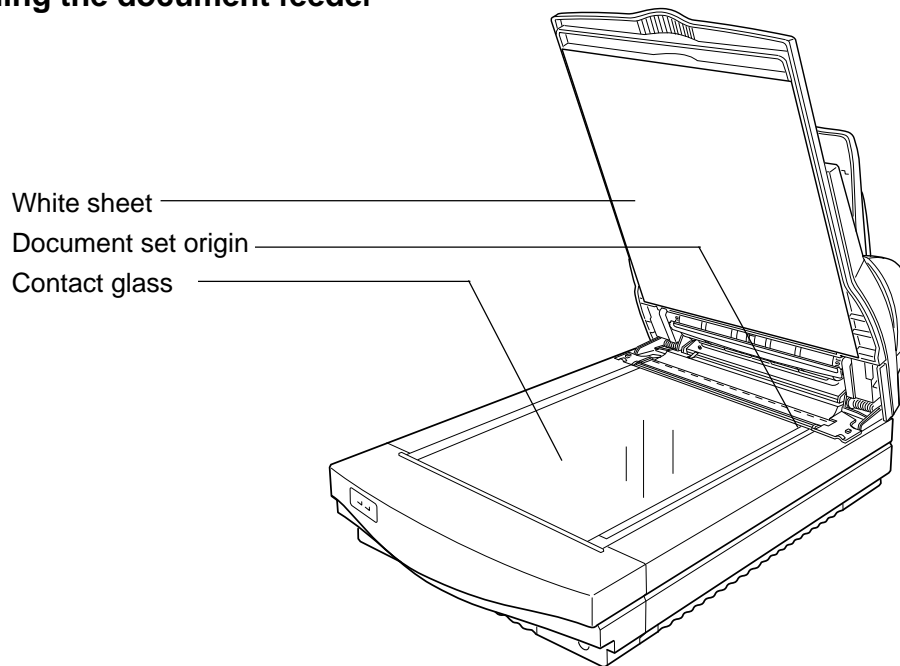

i Rear view

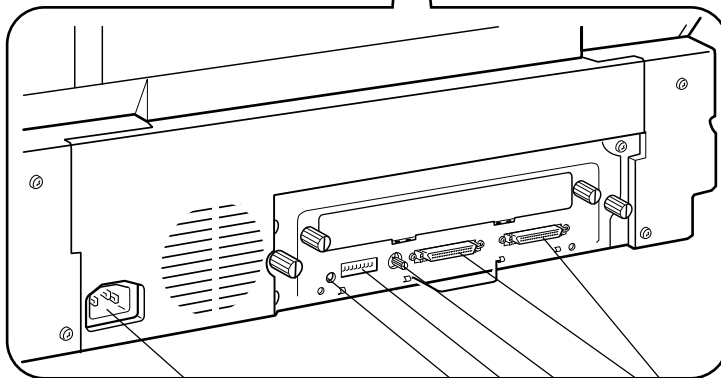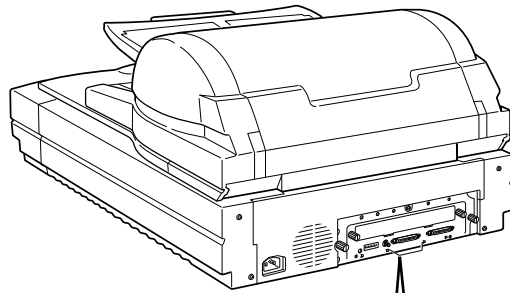

- SCSI connectors
- Rotary switch
- DIP switches
- Reset switch
- Power cord socket


2. Installation

i Checking the parts


Make sure that you have all the parts shown below in your packing box.

Parts list


Name	Q'ty
Scanner	1
Power cord	1
Terminator	1
SCSI cable	1
User's manual (English)	1
User's manual (German)	1
User's manual (French)	1
Registration card	1

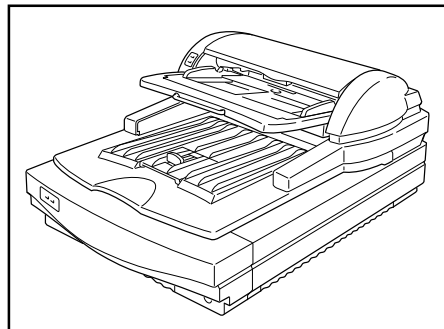


Scanner

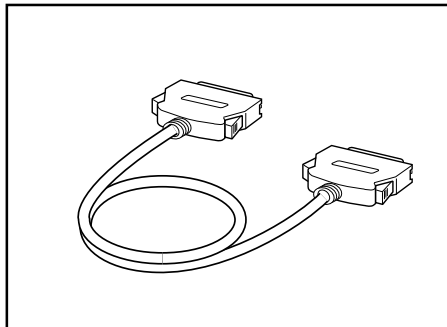


SCSI cable

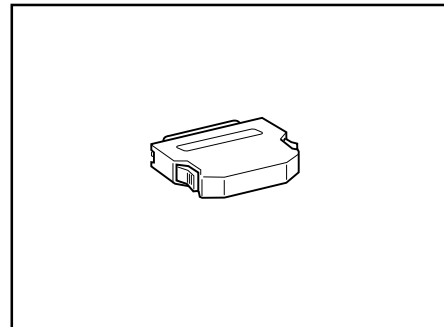

Terminator

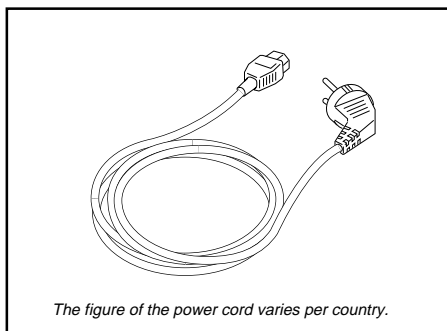

Power cord

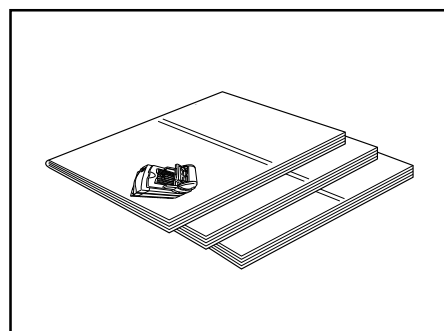



User's manuals
(Registration card is attached in the same package.)

i Location

Place the scanner in a location meeting the following environmental requirements.

Operating environment

- E Temperature: 10 °32°C
- E Humidity: 20 %80 RH
- E Space
 - Right: more than 20 mm
 - Left: more than 20 mm
 - Behind: more than 130 mm
 - Front: for operation
 - Height: more than 720 mm
- E Flat base
- E Out of direct sunlight
- E No vibration
- E No dust

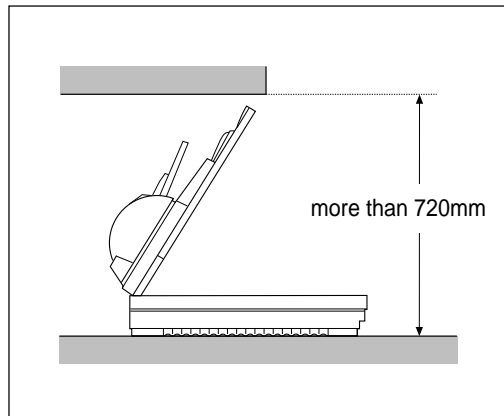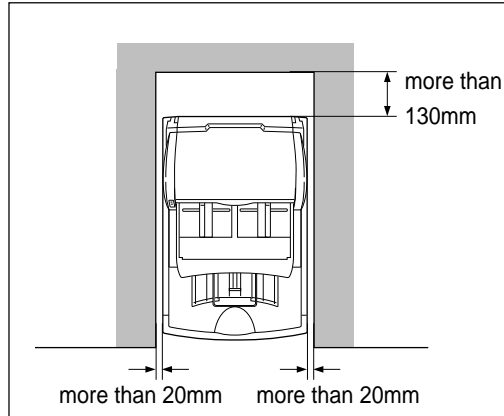


i Connecting the SCSI cable

Caution:

- E* Connect the cable before turning the power on.
- E* The use of interface cables other than shielded cables or specified equivalents will invalidate the certification of this scanner and may cause interference levels which exceed the limits established for this equipment.
- E* The total length of the SCSI bus should be no more than 6 m.
- E* Either one of the two SCSI connectors can be used, but an unused SCSI connector must be capped with a terminator.

This scanner connects to your host computer through the SCSI (Small ComputerSystem Interface). Connect the cable as follows.

1. Make sure that the power of all devices on the SCSI chain are turned off.
2. Connect a **high-density 50-pin type SCSI 2 cable which complies with ANSI *1** to the SCSI connector on the rear of the scanner.
3. If the other connector is not used, cap it with the attached terminator *2.

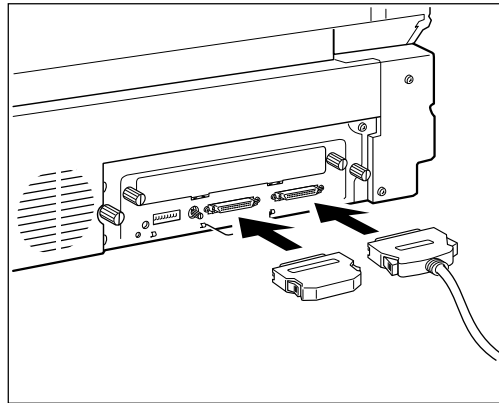

*1 Note about SCSI cables

There are several types of SCSI connectors, such as the high density 50-pin connector, the D-sub 25-pin connector, and the 50-pin flat connector. You have to use a SCSI cable that matches the connectors on your adjacent devices or host computer. This scanner has two high density 50-pin connectors. The SCSI cable packed with your scanner has a high density 50-pin connector at each end. If your computer (or any other connected device) has such connectors, you can use the attached cable. However, if you want to connect this scanner with a computer or device that has a different type of connector, you have to get a cable or a connector adjuster that fits the device or computer, as well as the scanner. In that case, you must use a SCSI cable that complies with ANSI.

*2 Note about terminators

Generally, you need two terminators at each end of a SCSI chain. If you connect this scanner at the end of a SCSI chain, you have to cap the scanner's unused SCSI connector with the attached terminator. If you connect this scanner in the middle of a SCSI chain that is already terminated, you do not need the attached terminator.


i Setting the SCSI ID

Caution:

- E No two devices on the SCSI-chain can have the same ID number.
- E The setting will not take effect until the machine is reset.
- E Do not set the SCSI ID to 8 or 9. The SCSI ID must be set between 0 and 7, even though 8 and 9 are present on the rotary switch.
- E If more than two of this manufacturer's scanners are connected to your system, you can not use SCAM. In this case, set the unique IDs for each scanners manually.

This scanner supports the SCAM standard. If your system also complies with this standard, set DIP switch 3 to OFF position (original position). The SCSI ID will be assigned automatically when power is next turned on. If your system does not comply with this standard, follow the steps below to set the ID manually.

1. Set DIP switch 3 to the ON position.
2. Turn the rotary switch and set the number to the desired SCSI ID number.
3. If you change the SCSI ID while the scanner is on, reset the scanner by turning the power off and on, or pushing the reset switch.

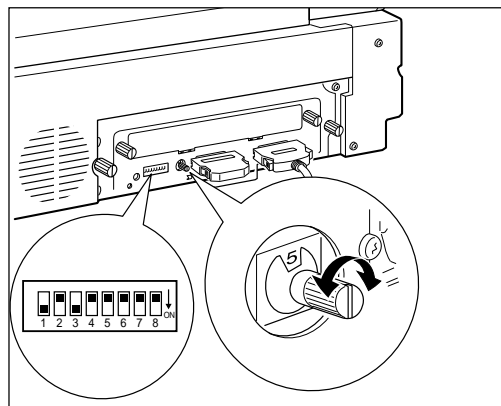


i Connecting the power cord

Caution:

- E Use the standard cable supplied with this unit. Otherwise, use cables that meet the requirements on page iv.
- E Connect the power cable before turning the power switch on.
- E This product is equipped with a 3-wire grounded power system. The plug has a grounding pin and must be inserted into a grounded outlet.

1. Make sure that the power switch is turned off.
2. First, insert the power cable into the power cord socket at the rear of the scanner.
3. Insert the other side of the power cord into the plug receptacle.

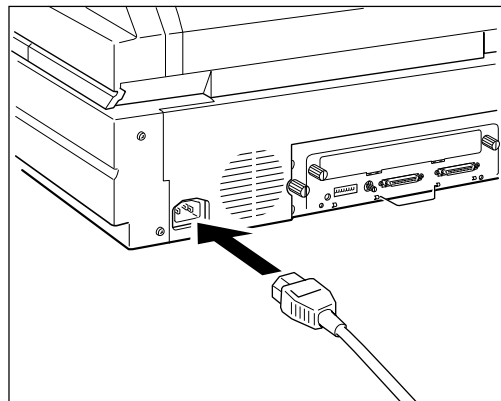

i Turning the power on

Caution:

Confirm that the DIP switches on the rear of the scanner are in the original position as shown right. If the settings have been changed, correct the settings, otherwise the scanner may not work correctly. Note : Switch 3 may be in the ON position if you are not using SCAM — if this is the case, the setting is correct.


Original position



OFF : with SCAM
ON : without SCAM

1. Push the power switch at the front of the scanner.
2. Confirm that the switch is set as shown in the illustration.

If you want to turn the power off, push the power switch again.

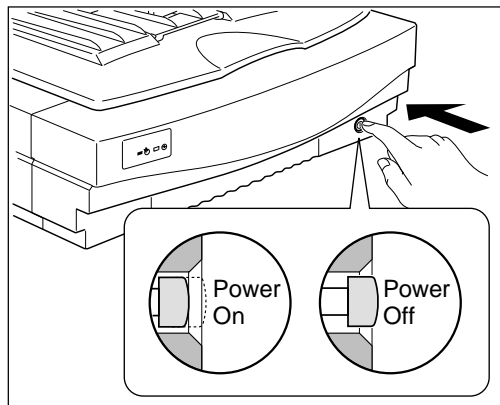


i Initializing the scanner

Generally, you do not have to initialize the scanner. However, when you change the SCSI ID or DIP switch settings while the scanner is on, you do need to initialize the scanner.


You can initialize the scanner not only by turning the power off and on but also by pushing the reset switch at the rear of the scanner.

1. Push the reset switch using a tapered tool such as the tip of a mechanical pencil.
2. Confirm that the four indicators light for a few seconds. This means the scanner is initializing.

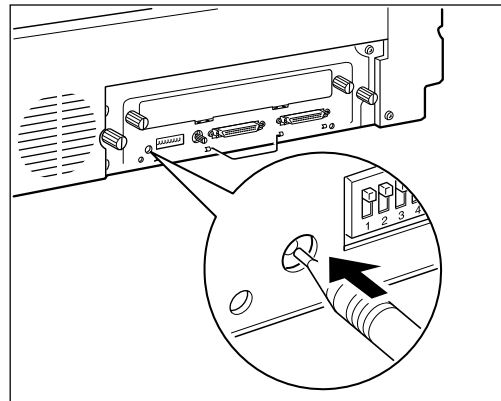

3. Indicators

The condition of the scanner is indicated by a combination of the lit indicators on the scanner and the document feeder.

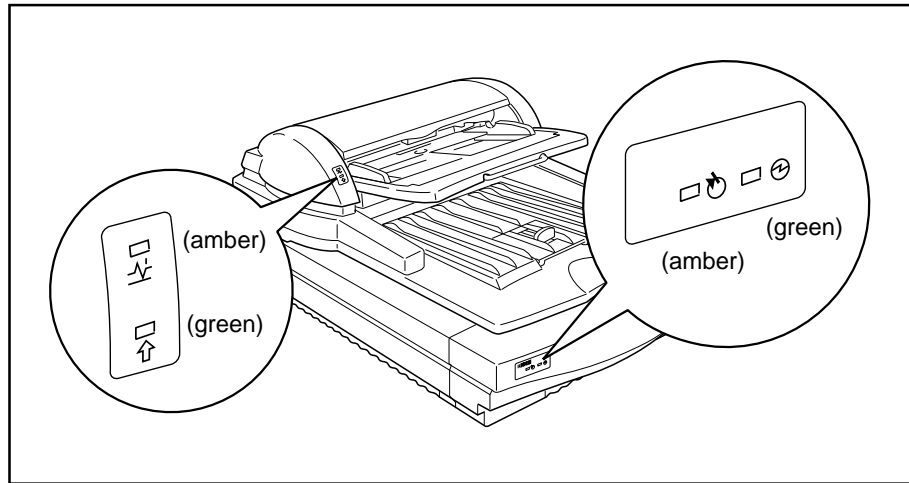

Indicators

- : On
- ▨ : Blinking
- : Off

Scanner		Document feeder		Meaning	
Green	Amber	Green	Amber		
■	■	■	■	Initializing/Checking	
■	□	□	□	Ready (No document is on the document feeder)	
■	□	■	□	Ready (Document is on the document feeder)	
■	□	▨	□	Ready (Document feeder requires a document)	
■	■	□	□	Busy (No document is on the document feeder)	
■	■	■	□	Busy (Document is on the document feeder)	
▨	▨	□	■	Error	Lamp cover open
▨	▨	■	■		Lamp error
■	□	□	■		Document feeder cover open
■	□	▨	■		Paper jam
■	□	■	■		Paper misfeed
■	□	▨	▨		Document table error
▨	▨	▨	▨		System error


If any of the above errors occur, see troubleshooting on page 16.

4. Placing originals


You can scan your originals two ways. You can place them one at a time directly on the contact glass (book mode) or you can place all of them on the document feeder (document feeder mode). Placing originals on the contact glass is the only way to scan books, magazines and the like. You can also scan single sheets this way.

Using the document feeder is ideal when you have many sheets to scan. Place your originals on the document table and they will be fed in and scanned automatically.

Book mode

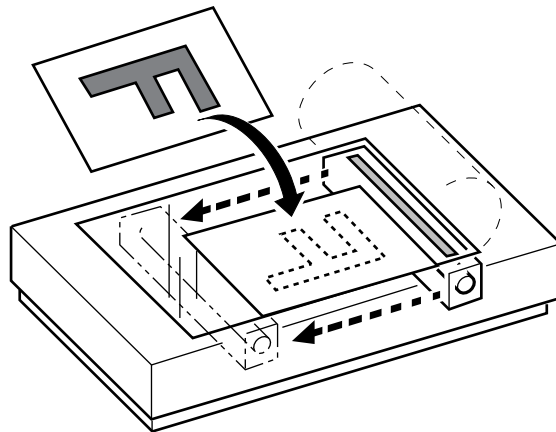

Document feeder mode

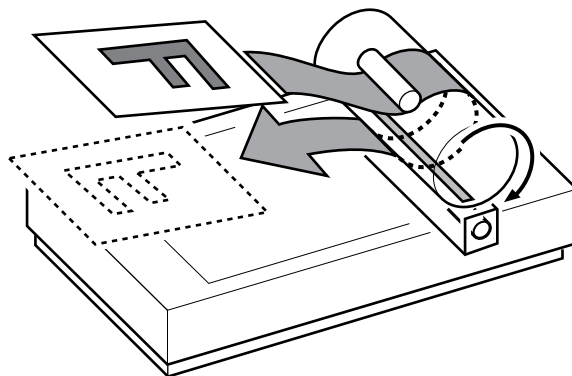

Placing an original on the contact glass

Original condition


Originals that meet the following specifications can be scanned.

- Weight: Less than 10 kg per document (Letter or A4)
- Thickness: Less than 10 mm (If document feeder is open, more than 10 mm is possible.)
- Written material: Pencil, toner, ink, ball point pen, anything that does not stick to the contact glass.

Procedures


1. Open the document feeder.

Caution: Don't press on the contact glass strongly, otherwise it might break.

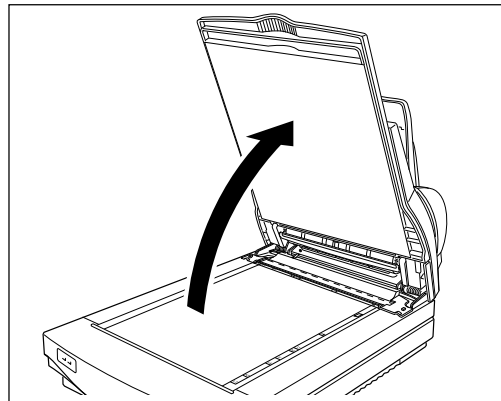

2. Put the original face down on the contact glass. Place the upper left edge of the original at the document set origin.
3. Close the document feeder slowly.

Caution: Keep your fingers away from the hinge when closing the document feeder.

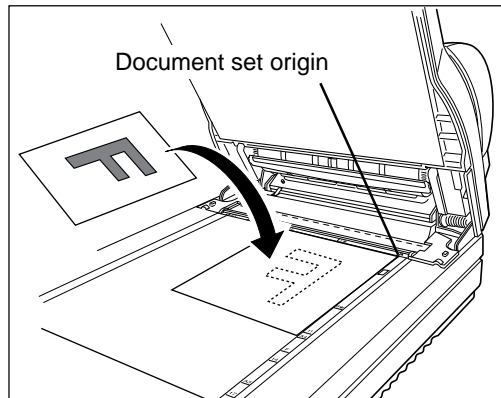

Placing
originals


Placing originals on the document table

Original condition


Originals that meet the following specifications can be handled by the document feeder.

Caution: When an original needs to be scanned that does not meet the following specifications, place the original on the contact glass and scan in book mode, otherwise your original may be damaged.

- Size: Length: 120 ~ 432 mm
Width: 69 ~ 297 mm
- Weight: 11.2 lb ~ 34.1 lb (42 g/m² ~ 128 g/m²)
- Stack: All originals must be the same width
Height is less than 12 mm
(Ex: 20lb paper ~100, 24lb paper ~85)
- Paper: Bond paper, PPC paper, or art/coating paper
- Thickness: 0.07 ~ 0.16 mm
- Written material: Toner, pencil, marker ink, water sign pen, ball point pen or ink that does not adhere to the contact glass and the roller. Ink must be dry.
- Curl: Back curl: Less than 5 mm Face curl: Less than 10 mm




- Others: If curled, flatten it within the above levels.
No tears, wrinkles, perforations, and pastes.
No projections such as a clip or staple.
No folds within the following area.

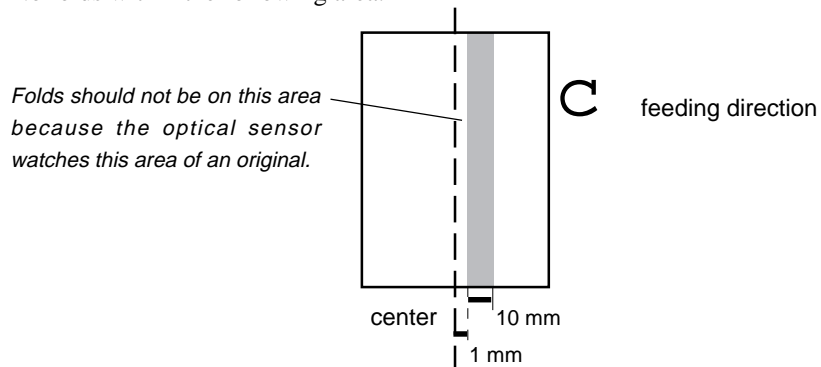

Procedures


1. When scanning large size originals, extend the document table.

Note: If the extension of the document table is pushed down strongly, it will come off to prevent it from damaging. If it comes off, put it back .

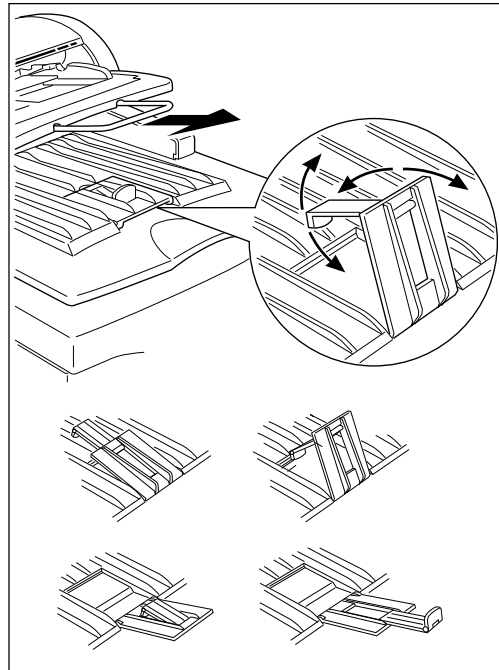

2. Adjust the exit table stopper according to the size of the original.


3. Fan and then square the stack of originals.

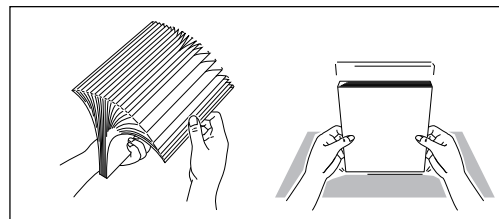

4. While holding the guide stopper on the left guide, adjust the document guides to the width of originals.

Caution: Adjust the guide before setting originals, otherwise the inner mylar might be damaged.

5. Place the originals face up into the document table until the green indicator of the document feeder lights.


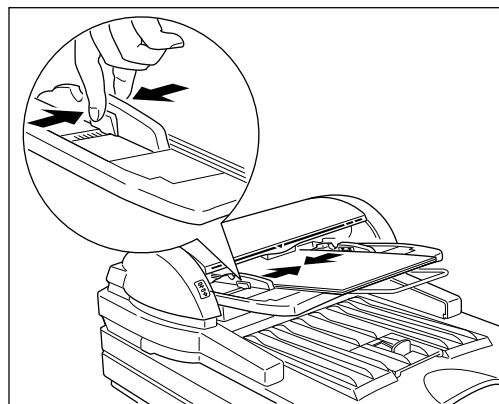


Placing
originals

5.Cleaning

If the contact glass or the white sheet is dirty, it will adversely affect the quality of the scanned image. If the roller of the document feeder is dirty, it can cause paper jams, misfeeds, or soil the originals. The above mentioned parts must always be kept clean.

Before scanning, clean the contact glass, the white sheet, and the platen by wiping them with **dry soft cloth**.

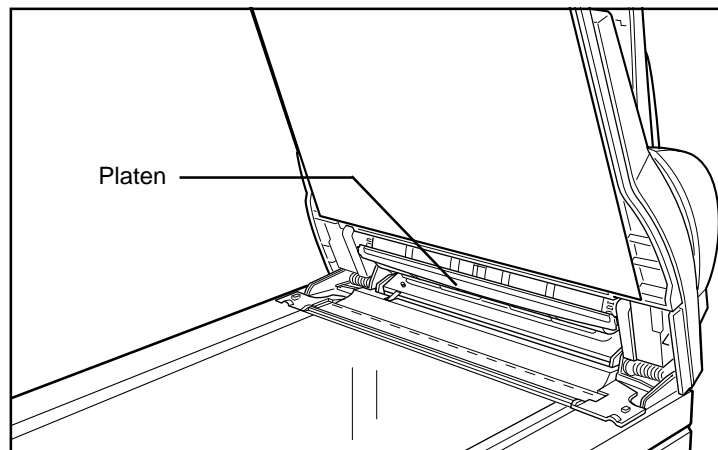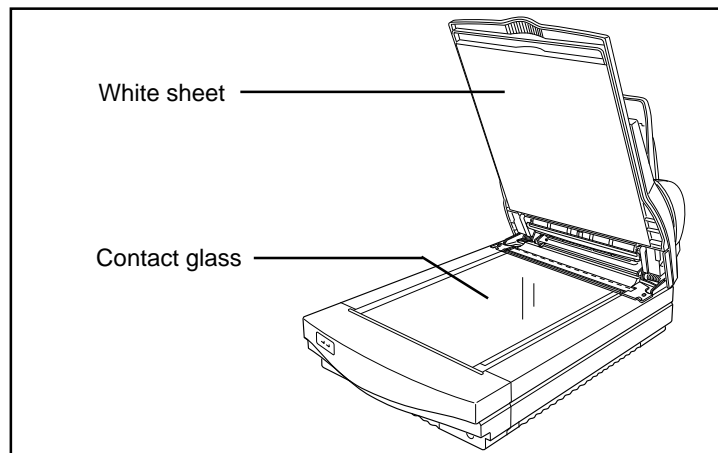


Caution:

*Don't press on the contact glass strongly, otherwise it might break.
Keep your fingers away from the hinge when closing the document feeder.*

If feed errors such as jams and/or double feeds occur, open the document feeder cover and clean the feed roller by wiping it with a **damp cloth**.

Caution: Clean the roller after scanning an original written with material that doesn't stick well to the sheet, such as pencil lead. Otherwise the next original may be soiled.

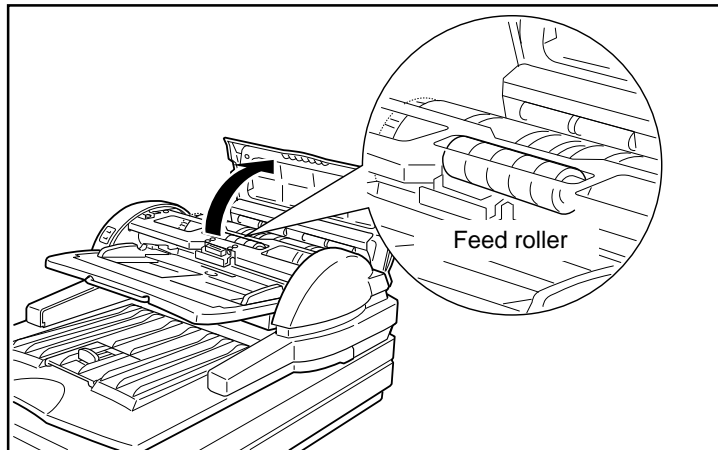

Cleaning

6. Troubleshooting

If an error occurs, the type of error is indicated by a combination of lit indicators, as mentioned on page 9. Follow the appropriate directions below. If the error is not solved by the measures given below, contact your service representative for assistance.


i Lamp cover open

Scanner		Document feeder	
Green	Amber	Green	Amber
Blinking	Blinking	Off	On


This indicates that the lamp cover is not closed.

Corrective action

1. Open the document feeder.

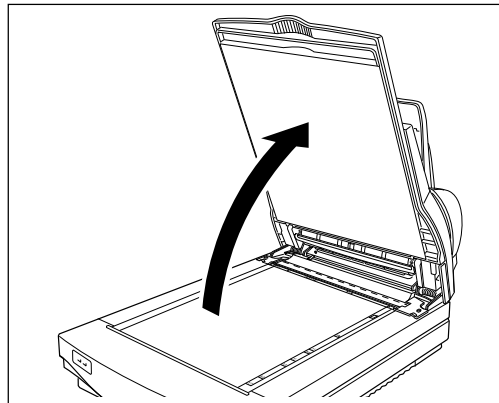

2. Remove the lamp cover and then reinstall it correctly.

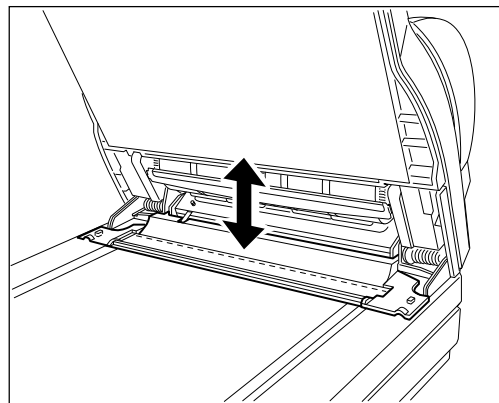


i Lamp error

Scanner		Document feeder	
Green	Amber	Green	Amber
Blinking	Blinking	On	On

This indicates that the CCD does not sense light from the lamp.
The lamp may be burned out or the connector may be disconnected.

Corrective action

Remove the lamp connector and then re-install it correctly referring to page 36.
If the error is not solved, the lamp may be burned out. Call your service representative to buy a new lamp. Refer to page 36 to replace it.

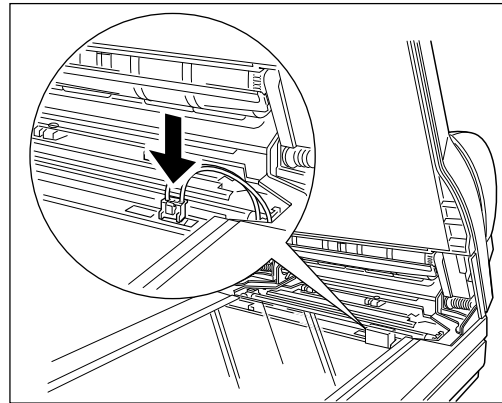


i Document feeder cover open

Scanner		Document feeder	
Green	Amber	Green	Amber
On	Off	Off	On

This indicates that the document feeder cover, and/or the document feeder is not closed.

Corrective action

Close the document feeder and/or the document feeder cover.

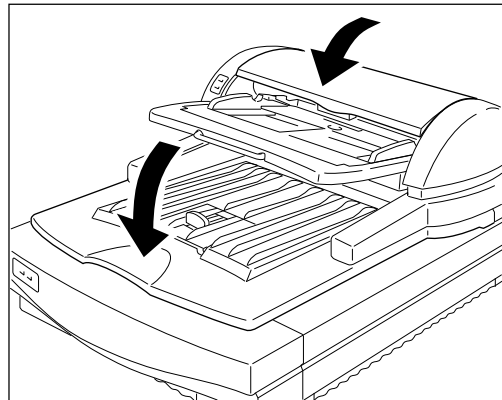

Troubleshooting


i Paper jam

Scanner		Document feeder	
Green	Amber	Green	Amber
On	Off	Blinking	On


This indicates that an original is jammed in the document feeder.

Corrective action

1. Open the document feeder cover.
If you can't see the document, see steps 4 to 6.
2. Pull out the jammed paper.
3. Place the original again referring to "Original condition" and "Procedure" on page 12 and 13.

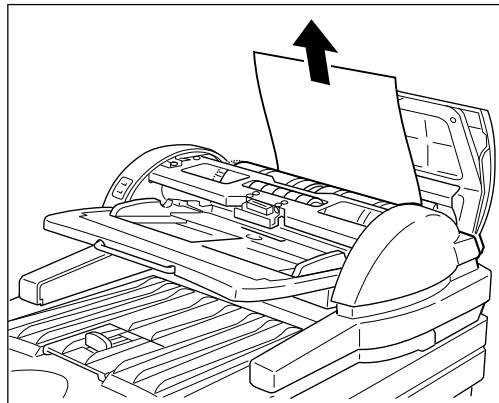

4. Open the document feeder.
If you can't see the document, contact your service representative.
5. Pull out the original gently.
6. Place the original again referring to "Original condition" and "Procedure" on page 12 and 13.

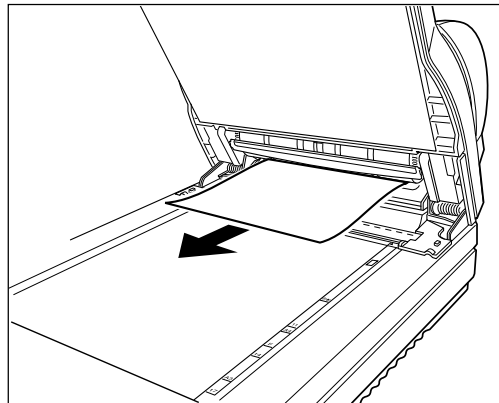


i Paper misfeed

Scanner		Document feeder	
Green	Amber	Green	Amber
On	Off	On	On

This indicates that the document feeder fails to feed the originals.

Corrective action

1. Open the document feeder cover.
2. Pull out the original.
3. Place the original again referring to "Original condition" and "Procedure" on page 12 and 13.

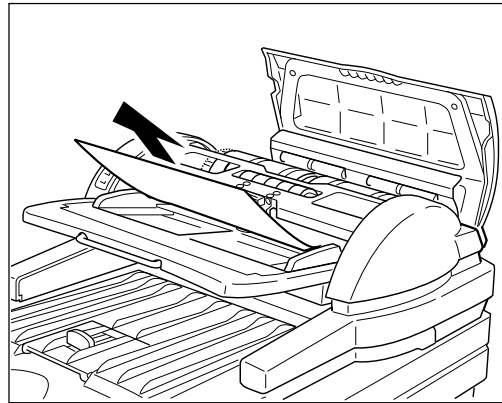


i Document table error

Scanner		Document feeder	
Green	Amber	Green	Amber
On	Off	Blinking	Blinking

This indicates that the document table is not in the correct position.

Corrective action

Open the document feeder cover and then close it.

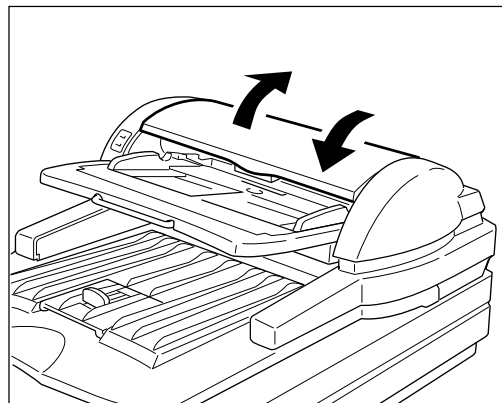

i System error

Scanner		Document feeder	
Green	Amber	Green	Amber
Blinking	Blinking	Blinking	Blinking

Corrective action

Initialize the scanner by switching the scanner off and on again or press the reset switch.

If the error is not solved, please contact your service representative.

i Others

If a problem occurs that is not indicated by the indicators, follow the directions below.

Problem	Cause	Corrective action	Refer
Power does not go on.	Power cord is not plugged in.	Plug the power cord in.	P.7
	Power switch is not turned on.	Turn on the power.	P.8
Does not run after power is on.	I/F cable is not connected securely.	Connect it securely.	P.6
	Host computer malfunction.	Reset the computer.	-
	SCSI ID is not correct.	Correct the SCSI ID.	P.7
Originals are not fed normally.	DIP switches setting is not correct.	Correct the DIP switches setting.	P.8
	The roller is not clean.	Clean the roller.	P.15
Scanned image is abnormal.	Specifications of originals do not match with the document conditions.	Place originals which match the document conditions.	P.12
	The contact glass is not clean.	Clean the contact glass.	P.14
	The roller is not clean.	Clean the roller.	P.15

7. Specifications

Type :	Desktop type
Scanning method :	Flat bed & Sheet feed
Scanning area :	Main direction 304 mm max. Sub direction 432 mm max.
Resolution :	Main direction 400 dpi Sub direction 400 dpi
Grayscale :	4, 6 or 8 bits / pixel
Speed :	Max. 50 ppm (page per minute) A4/Letter portrait by 200 dpi, binary with the document feeder <i>* Scanning speed depends on the system environment.</i>
Interface:	SCSI 2 Video interface with the optional video interface unit
Power:	AC 120V (60Hz), 220 ~ 240 V (50 Hz)
Power consumption :	Standby: 65 W max. (without optional units) Processing: 83 W max. (without optional units)
Dimension :	450 mm (W) ~670 mm(D) ~282 mm (H) 17.7 " (W) ~26.4 " (D) ~11.1 " (H)
Weight :	Approximately 25 kg

Appendix

Functions

Note: *The scanner is controlled by software. Some software does not support all of this scanner's functions. Unsupported functions are not available.
The names given to functions in this manual may be different from the names used by the software. Please refer to your software manual for details.*

The following functions are described.

Prescan
Scan
Scanning composition
Binary scanning/Threshold
Halftone scanning
Multi-value scanning
Area extraction
Section area (Multi area settings)
Auto photo/letter
Resolution
Brightness
Contrast
Gamma correction
Binary filter
Parameter download
Document size detection
Skew detection
Semi-automatic document feed (SADF) mode

i Prescan

Function: Scanning the whole available area at a low resolution (60, 75, or 100DPI*).

Usage: Use "Prescan" when you want to obtain a quick, low-resolution scanned image. You can then adjust the scan area so that subsequent scans apply to exactly the part of the original you want to scan.

**DPI stands for dots per inch and is a measure of resolution. Sometimes PPI (pixel per inch) is used instead of DPI. The higher the resolution, the finer the detail.*

i Scan

Function: Scanning a selected area with all desired settings.

Usage: Enter settings such as the scan area, scanning composition, resolution, and so on, and then scan using "Scan".

Determine the value of the settings based on the original and the output device (screen, printer, etc.). Even if you scan an image at high resolution, you cannot output it at high resolution with a low-resolution output device. Scanning an image at high resolution requires much more memory space and processing time.


i Scanning composition

Function: You can scan using one of three compositions; binary, halftone, or multi-value.
Binary scanning records only black and white from the original. **Halftone scanning** records gray shades on the original using a pattern of black and white dots to represent these shades. **Multi-value scanning** records grays over 16, 64, or 256 levels.


Usage: Use binary scanning to scan images with no gray shading, such as text or line art.
Use halftone scanning to scan an image with gray shading such as a photograph, to be printed or displayed on a monochrome device, such as a laser printer.
Use multi-value scanning to scan an image with gray shading, such as a photograph, to be printed or displayed on a gray scale device.
Refer to the following pages for details.



Original

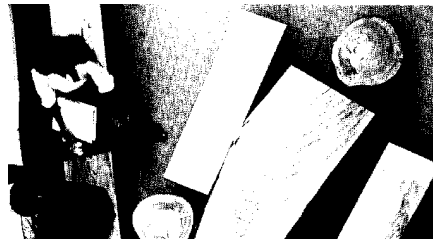

Binary scanned image

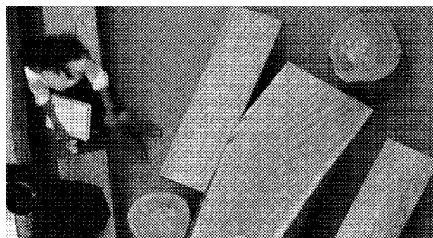

Halftone scanned image



Multi-value scanned image


i Binary scanning / Threshold

Function: A binary composition scanning converts every pixel on the image to either black or white. If the image contains a gray area, the threshold value determines whether the scanner records it as black or white. If the threshold value is high, the scanner records more pixels as black. If the threshold value is low, the scanner records fewer pixels as black.


Usage: Use a binary composition when scanning binary images such as text and line drawings; black and white images without any gray areas. You can select one of following two methods to set the threshold value in binary scanning; manual threshold or dynamic threshold.

Manual threshold

A whole image is binalized using a specified threshold. The threshold can be set between 1 and 255. When scanning a light image, set the threshold higher. When scanning a dark image, set the threshold lower.

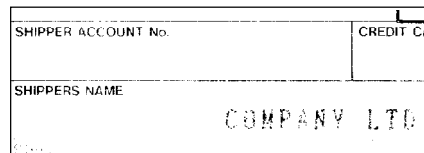


Lower threshold

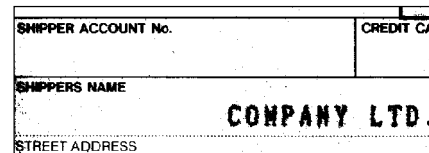

Higher threshold

Dynamic threshold

The scanned image is binalized with an appropriate threshold as determined by the scanner by using an optional image processing unit.

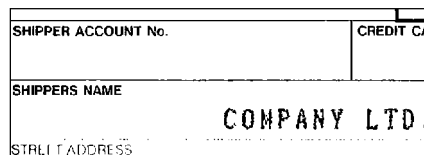

Dynamic threshold

Appendix


i Halftone scanning

Function: Halftone creates the illusion of gray scales by simulating shades of gray from patterns of black and white dots.

Usage: Use halftone scanning when scanning an image with gray shadings such as a photograph, to be printed or displayed on a monochrome device, such as a laser printer. Halftoning saves memory, so it is convenient for filing a large amount of image data. This scanner has eleven halftoning methods: ten dithering methods and one error diffusion method.



Original

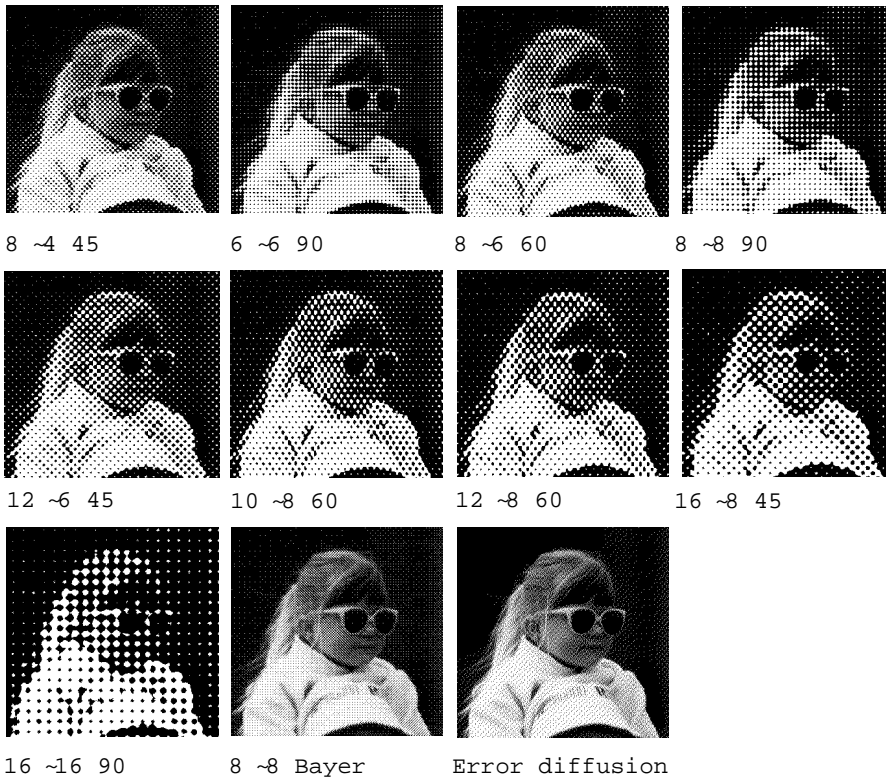

i Multi-value scanning

Function: Multi-value scanning can record 4, 6, or 8 bits of information for each dot on the image.

The 4-bit multi-value data represents 16 different shades of gray, the 6-bit data represents 64 shades of gray, 8-bit data represents 256 different shades of gray.

Note that the multi-value scanning uses more memory and disk space. For example, 8-bit scanning needs 8 times space more than binary (1-bit) scanning of the same scan area.

Usage: Uses multi-value scanning to scan an image with gray shading, such as a photograph, to be printed or displayed on a gray scale device.

Select 4-bit, 6-bit, or 8-bit according to the gray level of your output device.



Original



4-bit image



8-bit image

i Area extraction

Function: To extract a rectangular area from the whole scannable area.

Usage: For example, if you want to extract a photograph from a page, define a rectangle over the photograph, as shown below.

The position of the area is decided by setting the X and Y co-ordinates of the left-upper corner of the rectangle. The size is decided by setting the vertical and horizontal lengths, which can be set separately.



Original

d




Scanned image

i Section area (Multi area settings)

Function: Within the scannable area, you can set rectangular areas and define scanning modes such as binary scanning, halftone scanning, or binary filter etc. for each area. Six areas can be set for one scan. These areas can be piled on top of one another and the last defined area is valid.


Note: If six areas are piled, depending on how they are piled, scanning may not result in the correct mode. Reset the areas, after decreasing the number of areas or their sizes.

Usage: When scanning an original which includes binary images and halftone images, you can scan each image with its own composition method in one scanning.

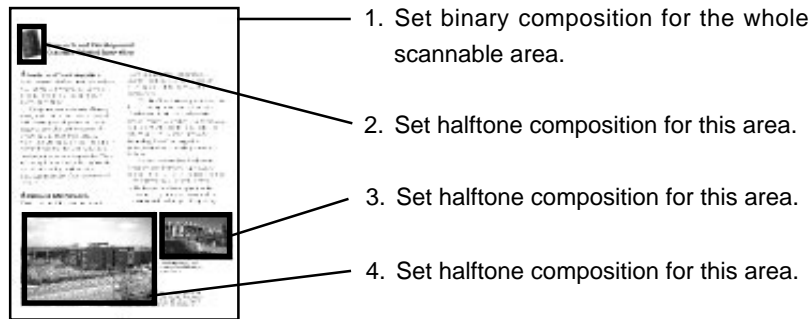


Original / Example settings

d

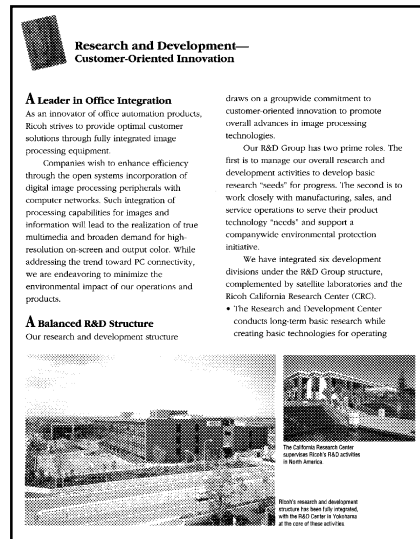

Scanned in example settings

In the case of scanning without this function

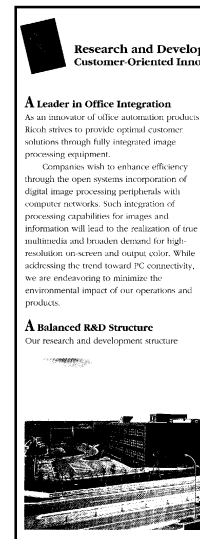

Scanned whole area in binary setting



Scanned whole area in halftone setting

Appendix

i Auto photo/letter

Function: This mode detects photo (halftone) areas and letter (binary) areas of the original so that the binary areas are scanned in the binary mode, and the halftone areas are scanned in the halftone mode.

Note: This function is available only when the optional image processing unit is installed in the scanner.

If binary areas and halftone areas are not separated clearly, segmentation may not be achieved .

Usage: Scanning of an original that includes binary images such as letters, and halftone images such as photographs.



Original



Scanned in binary composition

Scanned in half-tone composition

Scanned image

i Resolution

Function: To set vertical and horizontal resolution independently at 60, 75, and 100 to 800 dots per inch.

The higher the resolution, the finer the detail. However, a high resolution image requires much more memory space and processing time than a low resolution image.

Note: If the resolution is set at more than 400 dpi, the maximum scanning width is less than 304 mm.

Usage: Generally, setting the scanning resolution at the resolution of your output device results in high quality imaging. A lower resolution means lower quality and a higher resolution is a waste of memory. However, if you change the scale of your image, modify the resolution according to the scale.



Original



Lower



Higher

i Brightness

Function: To adjust the brightness value between 1 and 255.
A high brightness setting results in a lighter overall image. A low brightness setting results in a darker overall image.

Usage: When scanning a dark image, the darker area may appear as deep black although it has gray shades. In this case, increase the setting and shades of gray appear. Conversely, if a lighter image becomes pure white, decrease the setting.



Lower



Higher


i Contrast

Function: To adjust the contrast value between 1 and 255.
At a high contrast setting, the scanner emphasizes black and white, leaving few middle gray shades. At a low contrast setting, the scanner emphasizes the middle gray shades, at the expense of black and white.

Usage: If you want a sharp image, set a higher value. If you want a soft image, set a lower value.



Lower

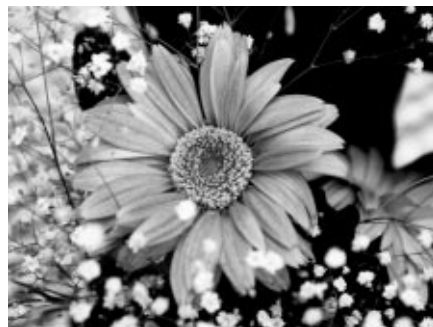

Higher

i Gamma correction

Function: To select following gamma correction settings:

- Normal: Emphasizes contrast slightly to improve a scanned image.
- Sharp: Emphasizes contrast to sharpen an image.
- Smooth: Weakens contrast to soften an image.
- Linear: Outputs an image as scanned.

User defined: Your own gamma correction curve is loaded into the scanner.

Usage: Select one of them depending on your original and output device.
If you want to correct an image finely, select the User defined setting to load your own correction curve.



Normal



Sharp



Smooth



Linear

Binary filter

Function: You can use 4 binary filters; noise elimination, smoothing, thickening black lines and edge extraction in binary scanning.

Noise elimination: Eliminates independent black or white dots.

Smoothing: Flattens uneven dots.

Thickening black lines: Thickens thin lines.

Edge extraction: Extracts outlines of the image.

Usage: For example, use filters at following cases.

Noise elimination: Use this filter when scanning a document which is copied several times. Black dots in a white area and white dots in a black area will be eliminated.



not filtered



filtered

Smoothing: If edges of a scanned image are uneven, scan it with this filter again. Edges will be even.



not filtered



filtered

Thickening black lines: Use this filter when scanning thin lines or characters.

COMPANY
mi-Aoyama 1-c
, Tokyo 107, Ja

not filtered


COMPANY
mi-Aoyama 1-c
, Tokyo 107, Ja

filtered

Edge extraction: Use this filter if you need outlines of an image for design etc.



not filtered



filtered

i Parameter download

To download a gamma curve and a dither pattern to the scanner.

You can modify the scanned image with your gamma curve and binalize it with your dither pattern.


Refer to your software manual for how to download these parameters to the scanner.

i Document size detection

The scanner detects the width and length of a document and sends them to the host computer.

Note: *Top and right areas (shadow areas of the right figures) of an original must be white. If these areas are colored, the size may not be detected correctly.*

Place an original on the contact glass along the top and right scale. Place originals on the document table tightly against both sides guides. If an original is not placed correctly, the scanner may not detect the size correctly.

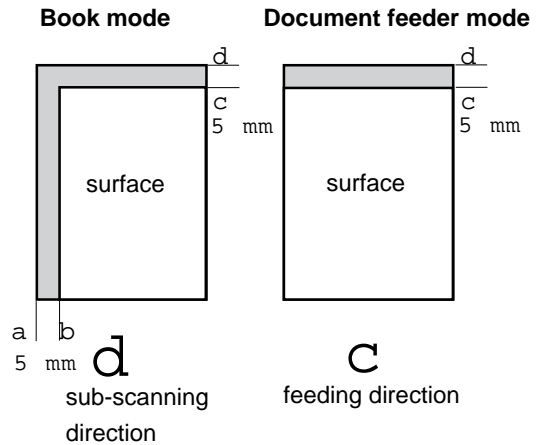

i Skew detection

To detect at what angle the document is skewed and to send the skew angle to the host computer.

i Semi-automatic document feed (SADF) mode

In this mode, originals which are set on the feeder one at a time are automatically fed into the document feeder and scanned one at a time.


Options

Red lamp unit


You can use the optional red lamp unit to skip the OCR red images. Replace the lamp unit with the optional red lamp unit as follows.

Warning: *E Never change the lamp unit with the scanner plugged in.
E The lamp becomes very hot. Wait for about five minutes after turning the power off to let the lamp cool off.*

1. Initialize the scanner to return the carriage to its original position.
2. Turn the power off and disconnect the power cord.
3. Open the document feeder.

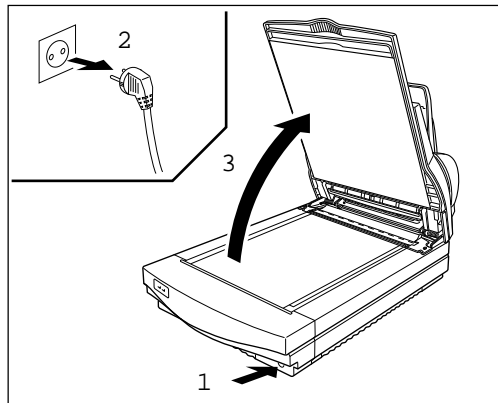


4. Remove the lamp cover.
5. Remove the connector cover.
6. Disconnect the connector.

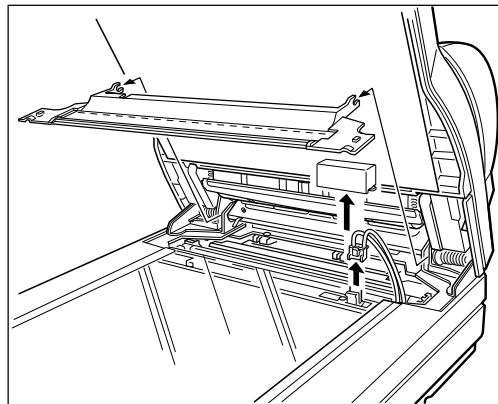

7. Hold the right side of the lamp and pull it up while sliding it to the left.

Caution: *Do not touch the middle of the lamp unit. Hold the green parts only.*

8. To attach the red lamp unit, go backwards through the previous steps.

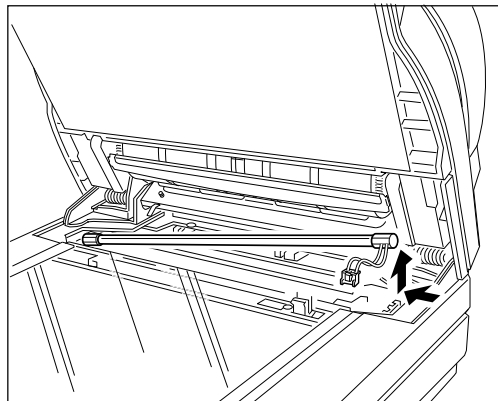

i **Data compression unit**

Using an optional data compression unit, it is possible to compress the scanned image data by methods known as MH, MR, and MMR. This saves memory capacity.

i **Video interface unit**

The optional video interface unit provides a video interface connector.

i **Image processing unit**

The optional image processing unit adds the following image processing functions.

Dynamic threshold:

The scanned image is automatically binalized by an appropriate threshold. The scanner discriminates a background color and decides the threshold to use.

Auto photo/letter:

The scanner automatically detects letter areas and photo areas of the original. The letter areas are scanned in binary, and the photo areas are scanned in halftone.